

## Basic setup to get you going - Devo or multipro module

### H8 mini (Bayang protocol) radio channel mapping:

Ch 1 - Roll

Ch 2 - Pitch

Ch 3 - Throttle

Ch 4 - Yaw

Ch 6 - Flip

Ch 9 - Headless

Ch 10 - RTH

### One method to set up a switch on a Devo (or multipro module) to switch between acro and level modes:

1. Set up a switch on the Devo on Ch 9 so it switches between -100 and +100 (-100 is acro, +100 is level)
2. In config.h of the firmware, set the acro/level mode switch to "CH\_HEADFREE". Note "headless" and "headfree" mean the same thing in this firmware.

Change the default level/acro switch in config.h from this:

```
#define LEVELMODE CH_AUX1
```

to this:

```
#define LEVELMODE CH_HEADFREE
```


For a Devo or other tx using a Goebish multiprotocol module, it is sufficient to set the scale for each stick (or switch) to + and - 100%.

If you want to do an accel calibration, or use gestures to switch from level to acro mode, make sure your rates are at least 85%, or the stick movements will not register with the FC. Also, you need to be in level mode for an accel cal to work.

If you want to keep the headless function, then choose CH 6 or CH 10 for the level/acro switch and set the level/acro switch in config.h to suit (CH\_FLIP or CH\_RTH respectively).

In config.h, the default "#define LEVELMODE CH\_AUX1" is used if you have a stock tx and want to use the gestures mode to switch between the acro and level modes. The gestures switch a virtual channel within the firmware named "AUX 1" on and off. A "gesture" consists of a stick sequence, left/left/down on the pitch/roll stick within 2 seconds, and then the LED's flash in recognition, and right/right/down to switch back. Gestures can be used with a Devo or other tx with a Goebish multiprotocol module, in lieu of a programmed switch.

Here is a pic of a Devo screen showing a level/acro switch set up on Ch 6 (thanks to czajunia on rcgroups). The HOLD1 switch has been selected as the source in the Devo, and the curve is set to min/max, so the radio output is -100 or +100 depending on the position of the HOLD1 toggle switch. For Devo Ch 6, you would set the level/acro switch in the firmware in config.h to CH\_FLIP.

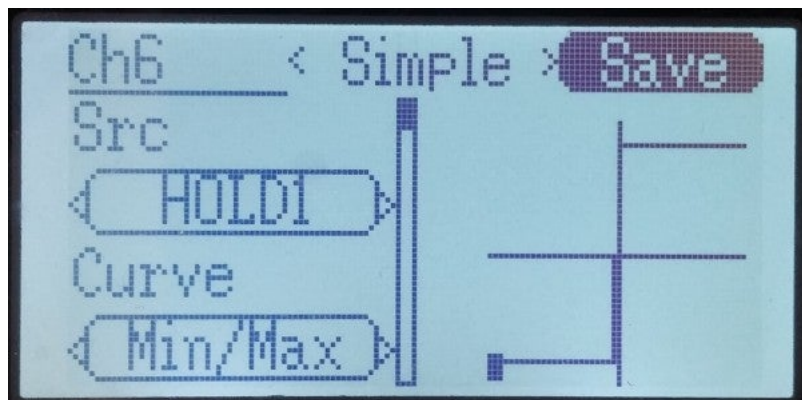

## Rates:

For Devo or a multipro module, high rates is selected in config.h in the firmware, and then the low rate is set in your tx, to whatever value or values you prefer. (See below for an alternate method for H101 and H8 mini green boards only.)

```
// rates / expert mode
#define RATES CH_EXPERT
```

The actual rate of the “high” or “expert” rates is selected here, in this case (the default values are shown), we have  $180 \times 2 = 360$  degrees per second for the high rate. The firmware will accept up to 2000 degrees per second I believe, if you want faster rates, you can increase either the 180.0f value or the multiplier 2.0f.

```
// rate in deg/sec
// for low rates ( acro mode)
#define MAX_RATE 180.0f
#define MAX_RATEYAW 180.0f

// multiplier for high rates
// devo/module uses high rates only
#define HIRATEMULTI 2.0f
#define HIRATEMULTIYAW 2.0f
```

There is an **alternate method** to set rates on the quad using a radio channel, any of CH5 to CH10, which can be used with the H8 mini green or H101 boards only. In the code above, there is a low rate setting and a multiplier for high rates. The high rate can be selected with a radio channel in config.h as shown in the code below, the example uses CH5 to activate high rates. Thus by adjusting the values for MAX\_RATE and HIRATEMULTI the low and high rates can be set to your preference. MAX\_RATEYAW and HIRATEMULTIYAW work on the yaw axis only.

```
// rates / expert mode
#define RATES DEVO_CHAN_5
```

From:

<https://sirdomsen.diskstation.me/dokuwiki/> - **Silverware Wiki**

Permanent link:

[https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=basic\\_devo\\_multipro&rev=1483230660](https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=basic_devo_multipro&rev=1483230660)

Last update: **2017/01/01 01:31**

