

# Brushless setup

The h8, h101 and stm32 based boards could be used with brushless escs with some modifications. Depending on the board, inverted flight might also be supported.

## H8 boards (green)

The h8 boards need a “esc driver” replacing the normal pwm driver file. From the hardware point, the output could be before or after the FETs. If after, a pullup resistor needs to be installed, of 100 - 1000 ohms, and the capacitor, present across the motors, removed. The h8 board supports non inverted flight only.

## H101 boards

The H101 setup is similar to the H8, except it also supports inverted flight, using bidirectional escs.

## STM32 boards

The stm32 port has the esc driver built in, it just needs to be enabled in hardware.h. From the hardware point, the same options apply, before / after fets and pull-ups. This port supports non-inverted flight only. Additional options exist in the “drv\_esc.c” file, such as PPM limits.

## OneShot 125 note

The blheli escs are not supposed to work with oneshot125 and loop times under 1100. This is the case of this firmwares, in this case, to use oneshot125, the escs have to be flashed with PWM input “OFF”

## Using PWM input

The blheli escs can also be flashed to support “pwm” input, and in such case the esc driver is unnecessary. The motor minimum should be changed from zero to a slightly higher value. The same before/after fets signal options apply. A pwm frequency of 8Khz should be used in the quad code. The pwm input only recognizes certain frequencies.

## PPM limits

The PPM limits are usually found in the esc driver file, and should be set correctly. They do not necessarily correspond with the esc set limits, they may be slightly different. Especially important is the “minimum” limit, as the brushless motors should never stop in flight. The minimum limit should be set slightly higher in the code for this reason. A throttle check should be used to make sure the motors never stop above zero throttle.

## BLheli notes

Blheli has option to use “pwm input”, PPM input is always enabled. Oneshot125 is also always enabled, and autodetected, but may interfere with the pwm input. Blheli will autodetect the input type after powerup. “Enable pwm input” should be set to off if not used, and “programming by tx” unchecked as well.

## Links

H101 esc driver : ([rcgroups](#))

From:  
<https://sirdomsen.diskstation.me/dokuwiki/> - **Silverware Wiki**

Permanent link:  
[https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=brushless\\_setup&rev=1469403792](https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=brushless_setup&rev=1469403792)

Last update: **2016/07/25 01:43**

