


## I ripped off CLK and/or DAT pad - what to do now?

Is my FC rubbish now? In most cases, no. Watch out the following pictures, they show where to solder a wire to make the FC flashable again.

H8 mini green:

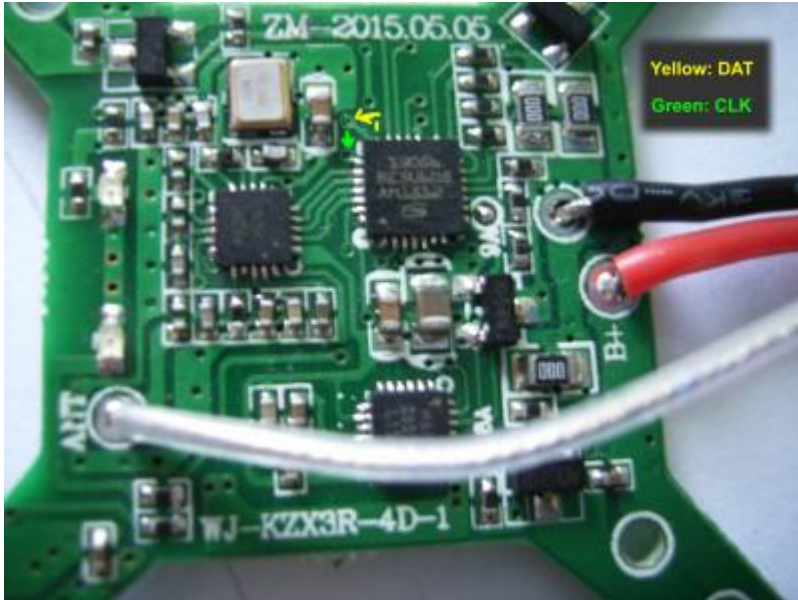

For H8 mini green an H101/H8s you can find a few more pictures including a short how-to [here](#) , introduced by RCGroups User [ltwvince](#)

From: <http://sirdomsen.diskstation.me/dokuwiki/> - **Silverware Wiki**

Permanent link: [http://sirdomsen.diskstation.me/dokuwiki/doku.php?id=clk\\_dat&rev=1479760430](http://sirdomsen.diskstation.me/dokuwiki/doku.php?id=clk_dat&rev=1479760430)

Last update: **2016/11/21 21:33**

