


I ripped off CLK and/or DAT pad - what to do now?


Is my FC rubbish now? In most cases, no. Watch out the following pictures, they show where to solder a wire to make the FC flashable again.

H8 mini green:

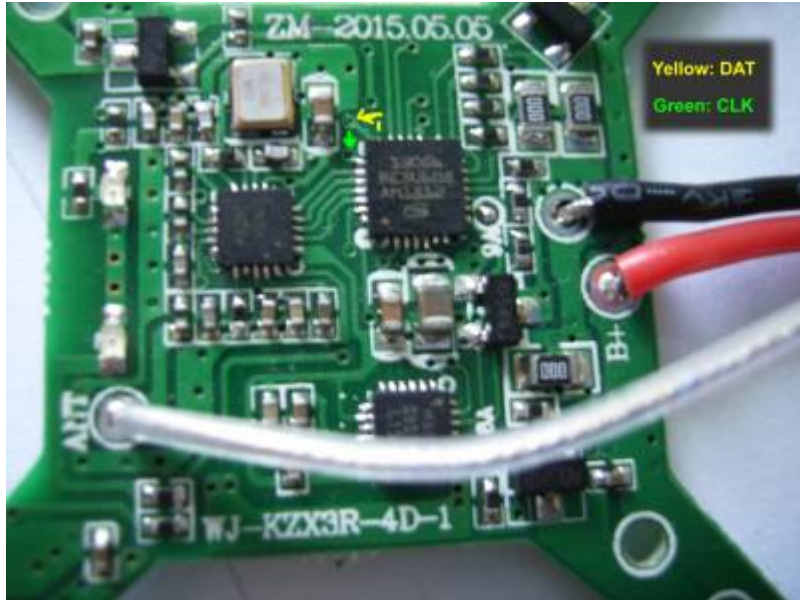

For H8 mini green an H101/H8s you can find a few more pictures including a short how-to [here](#) , introduced by RCGroups User [Itwvince](#)

Pic showing CLK and DATA pads for H8 mini blue FC:

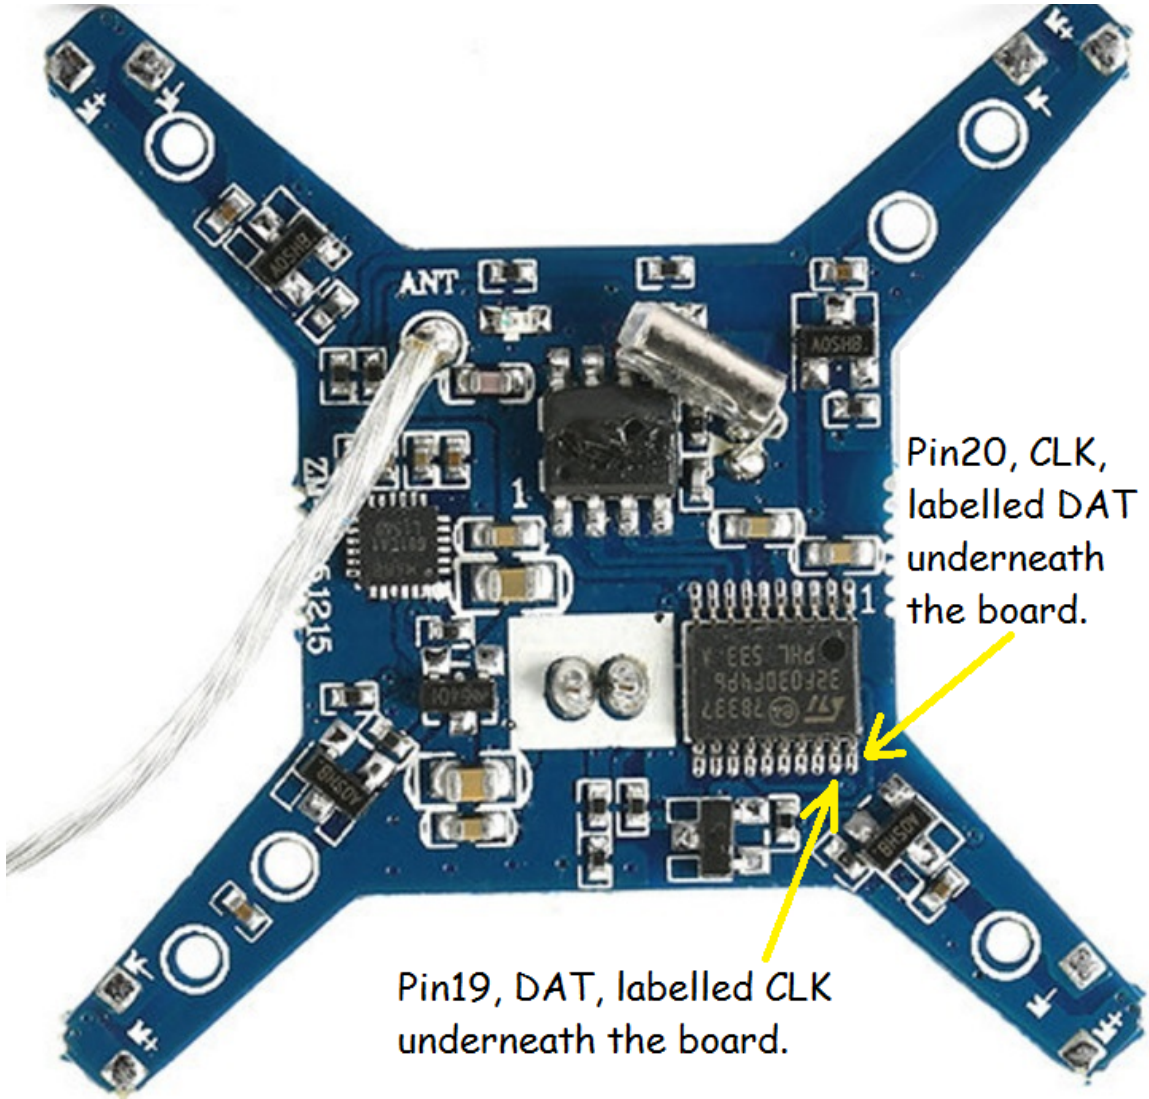

Pin20, CLK,
labelled DAT
underneath
the board.

Pin19, DAT, labelled CLK
underneath the board.

From:
<http://sirdomsen.diskstation.me/dokuwiki/> - **Silverware Wiki**

Permanent link:
http://sirdomsen.diskstation.me/dokuwiki/doku.php?id=clk_dat&rev=1586387217

Last update: **2020/04/09 01:06**

