


I ripped off CLK and/or DAT pad - what to do now?


Is my FC rubbish now? In most cases, no. Watch out the following pictures, they show where to solder a wire to make the FC flashable again.

H8 mini green:

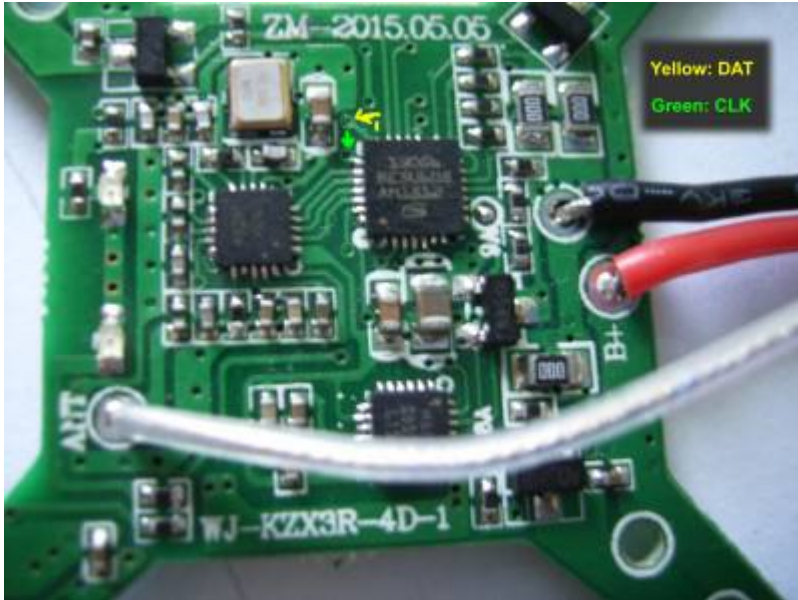

For H8 mini green an H101/H8s you can find a few more pictures including a short how-to [here](#) , introduced by RCGroups User [Itwvince](#)

Pic showing CLK and DATA pins for H8 mini blue FC:

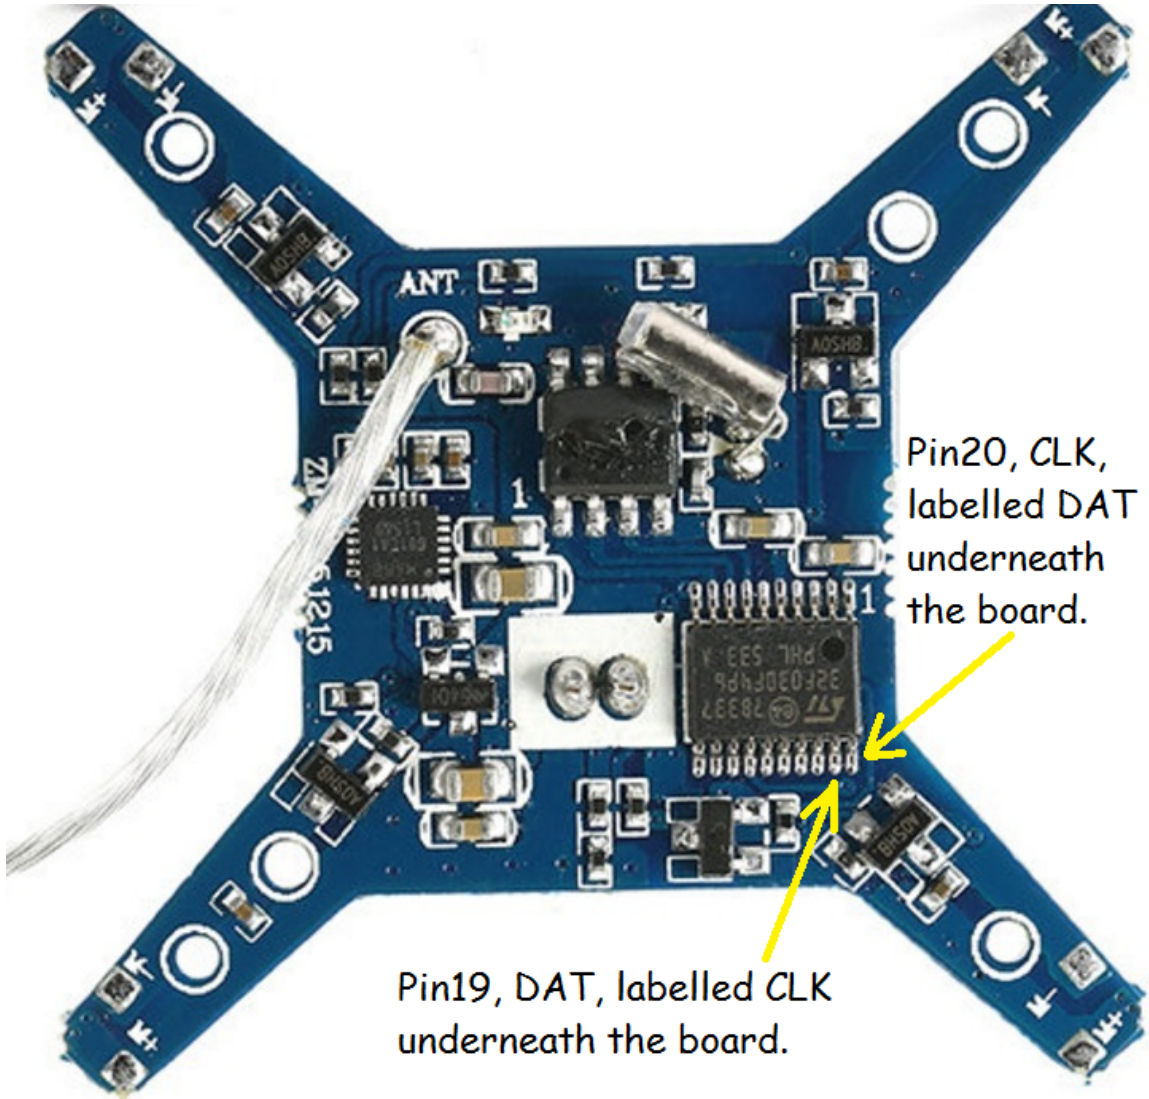

Pin20, CLK,
labelled DAT
underneath
the board.

Pin19, DAT, labelled CLK
underneath the board.

From:
<https://sirdomsen.diskstation.me/dokuwiki/> - Silverware Wiki

Permanent link:
https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=clk_dat

Last update: 2020/04/09 01:09

