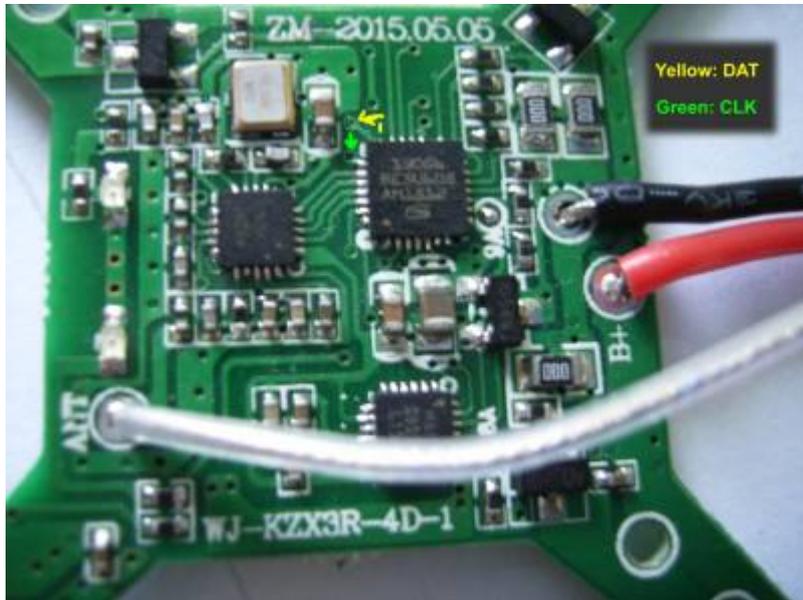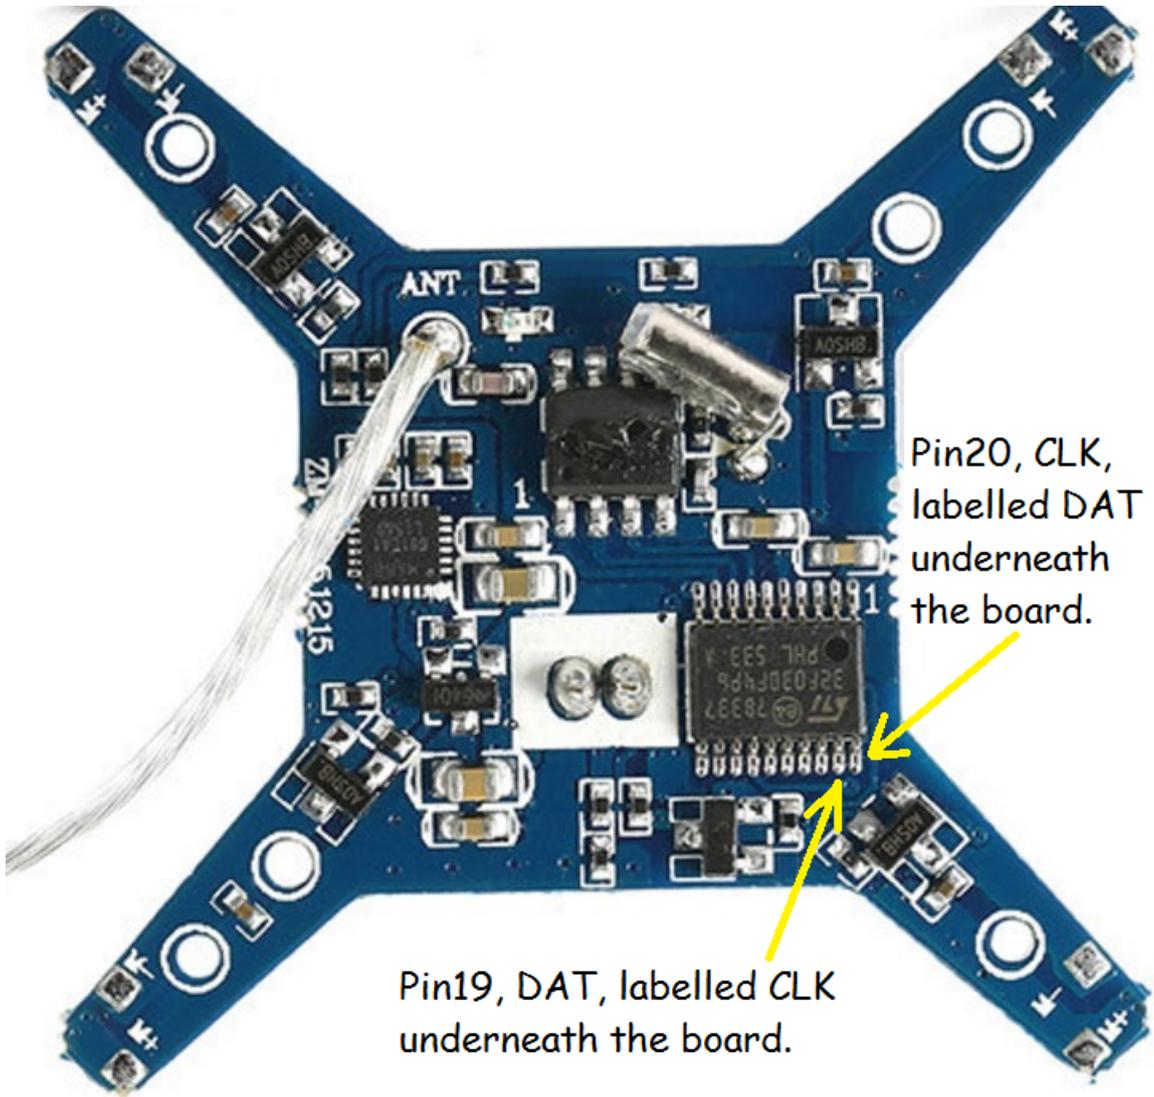# I ripped off CLK and/or DAT pad - what to do now?

Is my FC rubbish now? In most cases, no. Watch out the following pictures, they show where to solder a wire to make the FC flashable again.

H8 mini green:

For H8 mini green an H101/H8s you can find a few more pictures including a short how-to here , introduced by RCGroups User ltwvince

Pic showing CLK and DATA pads for H8 mini blue FC:

Pin20, CLK, labelled DAT underneath the board.

Pin19, DAT, labelled CLK underneath the board.

From:
https://sirdomsen.diskstation.me/dokuwiki/ - **Silverware Wiki**

Permanent link:
https://sirdomsen.diskstation.me/dokuwiki/doku.php?id=clk_dat&rev=1586387217

Last update: **2020/04/09 01:06**