

Gesture PID tuning

The gesture based PID tuning allows the pilot to change the acro PIDs at the field, without the use of a computer. The new PIDs can be saved, and will be loaded next time the quad powers up. If not saved by performing the appropriate gesture, they will be discarded when the quad is powered off.

Silverware branches of [BWHOOOP](#), [H8BLUE](#) (both STM MCU), [H101/H8S](#) and [H8Green](#) (GigaDevice MCU) now have the possibility to tune the PIDs via Tx gestures (thanks to RCGroups user eitama for adding it!).

New options in config.h:

```
// Comment out to disable pid tuning gestures
#define PID_GESTURE_TUNING
#define COMBINE_PITCH_ROLL_PID_TUNING
```

Make sure you have commented in

```
#define GESTURES2_ENABLE
```

on STM Silverwares, it won't work otherwise!

Basic instructions:

The PIDs can be changed in the order you find them in pid.c

example:

```
// Kp
float pidkp_flash[PIDNUMBER] = { 12.0e-2, 12.0e-2, 4e-1 };
// Ki
float pidki_flash[PIDNUMBER] = { 6.5e-1, 6.5e-1, 50e-1 };
// Kd
float pidkd_flash[PIDNUMBER] = { 6.05e-1, 6.05e-1, 4e-1 };
```

If you plug in the battery, The "cursor" stands on PID value "P" on ROLL axis

Gestures are as follows:

- Up - Down - Up (further called UDU) (means right stick Up-Center-Down-Center-Up, others work similar)
- Up - Down - Down (further called UDD)
- Up - Down - Left (further called UDL)
- Up - Down - Right (further called UDR)
- Down - Down - Down (further called DDD)

UDU: Cycle the Cursor to the next Row (Confirmed by LED Blinks, 1x Blink = P, 2x Blink = I, 3x Blink = D)

UDD: Cycle the Cursor to the next Column (ROLL -> PITCH -> YAW, also confirmed by the LED blinks as above)

note: If you selected #define COMBINE_PITCH_ROLL_PID_TUNING, you won't get the 2 blinks while changing the Column, as ROLL/PITCH are tuned simultaneously


UDL: Decrease the selected Value (Where the Cursor stands) by 10%

UDR: Increase the selected Value (Where the Cursor stands) by 10%

DDD: Save The selected PIDs to the Quad. (Note: this performs an ACC calibration if PIDs are unchanged. If UDL/UDR is performed at least once, the ACC calibration is skipped and only the PIDs are saved.)

For PID tuning, it's highly recommended to use [SilverVISE](#) Android app, where you can see the cursor and also see the PID numbers / changes. For all infos how to use the app please click at the link above.

For all that don't own an Android device and are interested in the actual numbers, debug mode can be used (with Keil), where the PIDs can be seen (as decimal numbers). Just add pidkp, pidki, and pidkd to the Watch1 window:

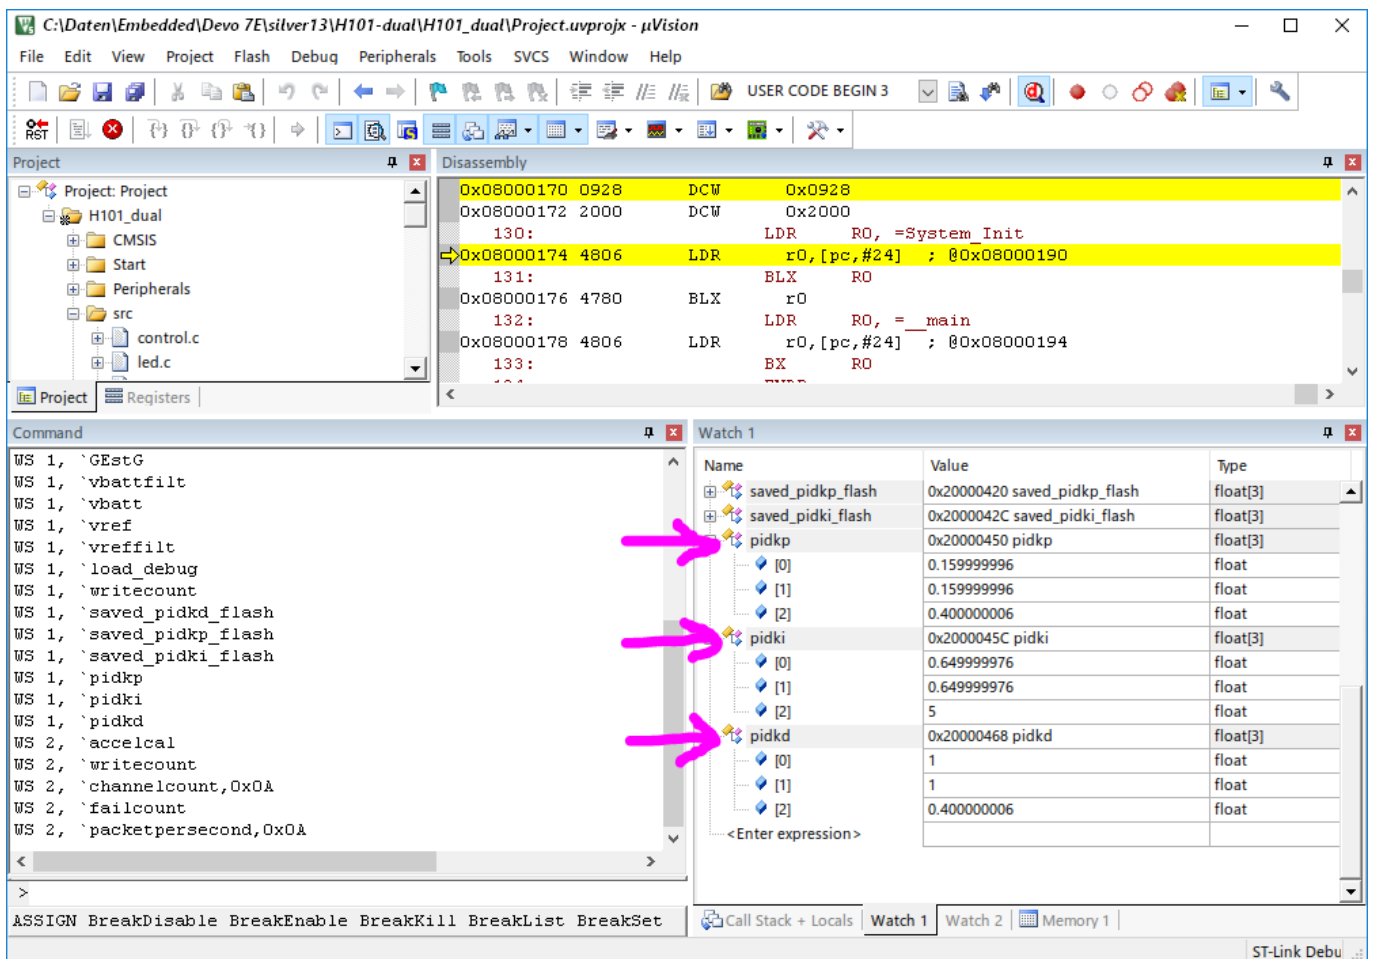

Important:

Once the PIDs got changed and saved via gestures, they will stay even when you reflash the firmware, given that you *did not change the PIDs in PID.c*. Once these are changed, these will overwrite the PIDs in flash, so take care while using Debug Mode

Entering debug will automatically flash code unless a setting is turned off.

From:
<http://sirdomsen.diskstation.me/dokuwiki/> - **Silverware Wiki**

Permanent link:
<http://sirdomsen.diskstation.me/dokuwiki/doku.php?id=pidgesture&rev=1497342960>

Last update: **2017/06/13 10:36**

